

TO FILL THE FOAM EXTINGUISHERS
PLEASE FOLLOW THE STEPS AS LISTED BELOW.



- 1:** Unscrew the extinguisher head
- 2:** Add 8.4 litres of water first
- 3:** Add 600ml foam
(total 9 litres - there is a mark on the pickup tube to indicate the correct level)
- 4:** Re-seal the head assembly by screwing down
- 5:** Apply air pressure to the tyre type valve in the head until the pressure gauge needle goes into the green

