


User Manual



261 ALARM REMOTE CONTROL

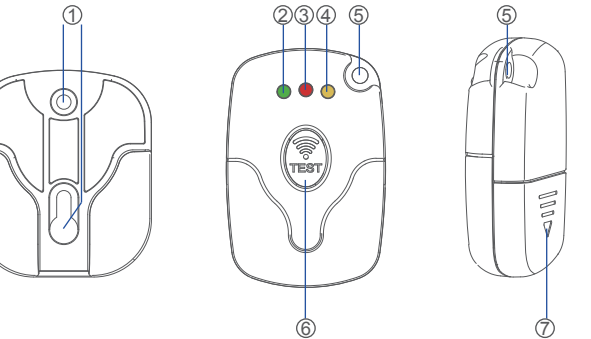

1. Cradle Hole
2. Normal LED
3. Alarm/Test/Hush LED
4. Low Battery LED
5. Lanyard
6. Test Button
7. Battery Cover

Cautions



PRODUCT LIMITATIONS: This device is only for use with compatible residential smoke and heat alarm device. Other uses are not approved by Numens.

Specifications

Quiescent condition indicator	Flashing green LED every 40 s
Alarm condition	Flashing red LED and synchronised vibration every 1 s
Test condition	Flashing red LED every 1 s
Hush condition	Flashing red LED every 6 s
Expected battery life	5 years
Low battery indication	Flashing yellow LED and synchronised vibration every 40 s, for 30 days
Radio transmitter operating frequencies	433 MHz, 868 MHz, 915 MHz
Maximum operating distance(typical)	30 m
Operating temperature	(0 ~ +50) °C
Operating humidity	(10 ~ 95) % RH, non-condensing

Features

The 261 alarm remote control operates in conjunction with compatible Numens residential smoke alarms and heat alarms to provide test and hush functions without having direct access to the alarm device. It is ideal where access to alarm devices is difficult due to installation height, or where residents are restricted in their ability to operate the functions.



Normal Operation

When operating normally, a green LED will flash every 30 s.



Alarm Condition

When a fire is detected by a compatible smoke alarm or heat alarm, the red LED will flash every 1 s and the internal vibrator will operate.



Test Condition

When a compatible smoke alarm or heat alarm is in the Test condition, the red LED will flash every 2 s.



Hush Condition

When a compatible smoke alarm or heat alarm is in the Hush condition, the red LED will flash every 1 s.



Low Battery Condition

When the internal battery is depleted, the yellow LED will flash every 1 s and the internal vibrator will operate every 60 s.



Normal Operation

When operating normally, a green LED will flash every 30 s.



Alarm Condition

When a fire is detected by a compatible smoke alarm or heat alarm, the red LED will flash every 1 s and the internal vibrator will operate.



Test Condition

When a compatible smoke alarm or heat alarm is in the Test condition, the red LED will flash every 2 s.



Hush Condition

When a compatible smoke alarm or heat alarm is in the Hush condition, the red LED will flash every 1 s.



Low Battery Condition

When the internal battery is depleted, the yellow LED will flash every 1 s and the internal vibrator will operate every 60 s.



Normal Operation

When operating normally, a green LED will flash every 30 s.



Alarm Condition

When a fire is detected by a compatible smoke alarm or heat alarm, the red LED will flash every 1 s and the internal vibrator will operate.



Test Condition

When a compatible smoke alarm or heat alarm is in the Test condition, the red LED will flash every 2 s.



Hush Condition

When a compatible smoke alarm or heat alarm is in the Hush condition, the red LED will flash every 1 s.



Low Battery Condition

When the internal battery is depleted, the yellow LED will flash every 1 s and the internal vibrator will operate every 60 s.

Installation

Installation Preparation

Equipment

Before commencing installation, ensure all equipment and tools to mount and test the device are available, such as drills and mounting screws (supplied).

Location Selection in Homes and Apartments

Choose a convenient location for the mounting cradle so that the remote control is easily accessible.

Battery

Install the battery (supplied) and check that the green LED flashes every 30 s.

Install the Cradle

Use the screws provided to install the cradle onto a horizontal wall surface.



www.numens.com



sales@numens.com



+86 574 82817218



9 Xizhao Road Innovative Industrial Area Dong Qian Lake
Ningbo, Zhejiang, China 315121

Group Configuration

- 1. Enter Group mode by pressing and releasing the Test button 5 times within 5 s. The internal vibrator will vibrate one time and the red LED will flash every 0.5 s. Group mode configuration will last 50 s (unless cancelled earlier by press test button one time),
- 2. To add a unit to the group, press and release the Test button on the second unit twice within 2 s. The red LED will flash one time, the internal vibrator will vibrate one time to confirm connection to the Group.

Enter Group mode

5 times

Press and release it 5 times within 5 s

Flash every 0.5 s and a short vibrate

Add a unite to the Group

2 times

Press and release it twice within 2 s

flash one time and a short vibrate

- 3. Repeat Step 2 to add additional units to the Group.
- 4. When all units are added to the group, press and release the Test button on the first unit to end the Group configuration mode.

End Group mode

Press and release it

flashes off

Remove a Unit from a Group

To remove the Remote Control from the Group, press and release the Testbutton 8 times within 5 s. The sounder will emit two short beeps and the red LED will flash twice to confirm removal from the Group.

Remove from a Group

8 times

Press and release it 8 times within 5 s

flash twice and 2 short vibrates

Normal Operation

Test the Remote Control

- 1.Press and hold the Test button for 3 s.
- 2.Check the sounder operates on the compatible smoke alarm or heat alarm.
- 3.Check the red LED flashes every 2 s.
- 4.Release the Test button to silence the alarm and resume normal operation.

To enter Group mode

Hold 3 s

Press and hold it more than 3 s

Flashes every 2 s

LED flashes every 1 s and sounder operates (0.5 s on / 0.5 s off)

Hush (Alarm Condition)



WARNING: Before using the hush feature, identify the smoke or heat source and be certain that safe conditions exist.

If investigation of the alarm signal is likely caused by a known nuisance source (such as cooking fumes), the Test button can be pressed to silence the sounder for 9 min.

Silence the alarm

Press and release it will hush the alarm

flashes and vibrates every 6 s

Service

Battery Replacement

Once the battery is depleted, remove the battery cover on the rear of the remote control. Replace the battery using Lithium DC 3 V type CR123A, available from most hardware stores.

Disposal

This product is designed to work reliably for 10 years after the installation date and should not be disposed of as land-fill. Please dispose in an environmentally friendly manner.



WARNING: This is an important document. Retain it for the life of the device.

Limited Warranty

In order to protect your rights, please retain the original purchase receipt for the proof of purchase. No warranty can be offered without the original purchase receipt.

Ambest Electronics (Ningbo) Co Ltd ("Numens"), warrants the enclosed product excluding any battery(ies), to be free from defects in materials and workmanship under normal use and service for a period of 1 year from date of purchase or 18 months from the date of manufacture, whichever is the lesser period. This LIMITED WARRANTY is the sole and exclusive warranty, express or implied for Numens products. No employee, agent, dealer or other person is authorized to alter, modify, expand or reduce the terms of this warranty or to make any other warranty on behalf of Numens.

Numens' obligation of this Warranty shall be limited to the repair or replacement of any part of the product which is found to be defective in materials or workmanship under normal use and service during the Warranty Period. Products in need of repair should be returned, shipping prepaid, to Customer Service Department, Numens, 9 Xizhao Road, Innovative Industrial Area, Dong Qian Lake, Ningbo, Zhejiang, China 315121. Numens shall not be obligated to repair or replace units which are found to be in need of repair because of damage, unreasonable use, modifications, or alterations occurring after the date of purchase. The duration of any implied Warranty, including that of merchantability or fitness for any particular purpose, shall be limited to the period of 1 year commencing from the date of purchase. In no case shall Numens be liable for any consequential or incidental damages for breach of this or any other Warranty expressed or implied whatsoever, even if the loss or damage is caused by Numens' negligence or fault. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. Numens makes no warranty with respect to the batteries, expressed or implied, written or oral, including that of merchantability or fitness for any particular purpose.